Features :

- 400 amps rated load
- Ceramic brazing technology is uesd to preventarcing leakage, fire and explosion
- No polarity requirement for contacts ,the coil has polarity requirement
- RoHS compliant



Typical applications:

- DC high voltage high current applications
- Main contactors for hybrid, electrical vehicles and fuel-cell cars
- Battery charging systems

Contact Data

Contact arrangement	1form A
Rated voltage	1000V
Rated current	400A
Max.switch voltage	1000V
Min. recommended contact load	1A, 12VDC
Max.Breaking current	1500A,(1000VDC,1cycle)
Contact resistance	≤0.5mΩ (at 20A)
Contact resistance	≤0.3mΩ (at 400A)
Operate/release time max.	30ms/10ms
Electrical endurance	Refers to electrical endurancegraph

Auxiliary contact

Contact arrangement	/
Rated voltage	/
Rated current	/
Contact resistance	/

Contact ratings

		Current[A] on /off	Voltage[V] on /off	Switching cycles	ON:OFF
SEL400D-V1000MXX2JK	Breaking: 0/1500 Breaking: 0/400		1000 1000	1 100	0.6s:5.4s 0.6s:5.4s
SEL400D-V800MXX2JK	Breaking: 0/400		800	300	0.6s:5.4s
SEL400D-V500MXX2JK	Breaking: 0/400		500	500	0.6s:5.4s
Making:		180(1500uF)/0	50	7×10^4	0.6s:5.4s
Mechanical endurance		0.003/0.003	12/24	2×10^5	0.5s:0.5s

Insulation Data

Initial dielectric strength	
between open contacts	3000VAC 1min 1mA
between contact and coil	3000VAC 1min 1mA
between main and auxiliary contact	/
max. Altitude	5500m
Insulation resistance	
between contact and coil	≥1000MΩ(1000VDC)
between open contacts	≥1000MΩ(1000VDC)

Coil Data

Coil voltage range: 12~24V

Coil versions, DC coil

(-40℃~85℃)

Rated voltage VDC	Operate voltage VDC	Release voltage VDC	Max. voltage VDC	Coil resistance at 23℃ Ω(1±10%)	Operating powers (at 23℃) (inrush,W)	Operating powers (at 23℃) (stable,W)
12	≤9	≥1.0	16	24	6	6
24	≤18	≥2.0	32	96	6	6


1) Max.allowable voltage refers to the maximum value in a varying range of operating power voltage, not a continuous voltage.
2) Unless specified otherwise, ambient temperature:23℃, on:off /0.6s: 5.4s.
3)If other types of rated coil voltage is needed, please contact us.

Other Data

Ambient temperature	-40℃ to +85℃
Ambient humidity	5% to 85% RH
Vibration resistance (functional)	10 to 500Hz, 49m/s^2 (5G)
Shock resistance[1)]	
Functional	Closed state:490m/s^2 (50G)
	Disconnected state: 98m/s^2 (10G)
Destructive	490m/s^2 (50G)
Terminal type	Connector (coil) and screw (load)
Weight	Approx. 380g
External dimension	V:86.05×42.5×74.5 H:83.8×74×43
Packaging unit	36pcs


1) No change in the switching state >10μs.

Coil operating range

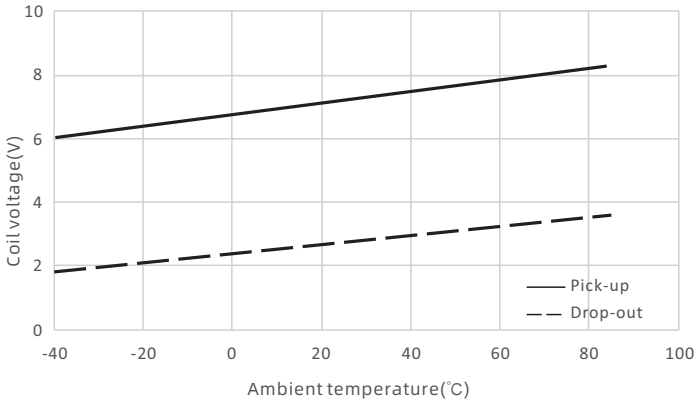


(1)Coil supplied voltage 12VDC;

Tolerance curve

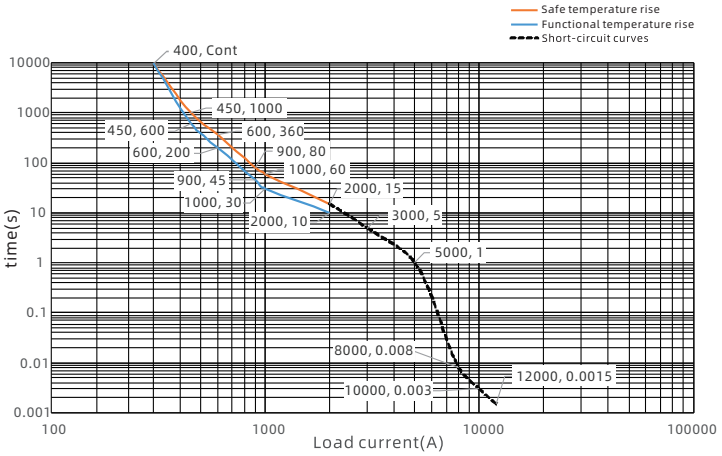

(1)The upper limit of safety temperature is 180℃,and the upper limit of functional temperature is 150℃;
(2)If the product needs to work for a long time, it is recommended that the product temperature should not exceed 150℃. If the safety temperature exceeds 180℃, the relay may be ignited;
(3)Ambient temperature is 85℃, wire cross sectional area ≥200mm²;
(Test conditions for this curve)


Outline Dimensions:SEL400D-VXXXMXX2JK

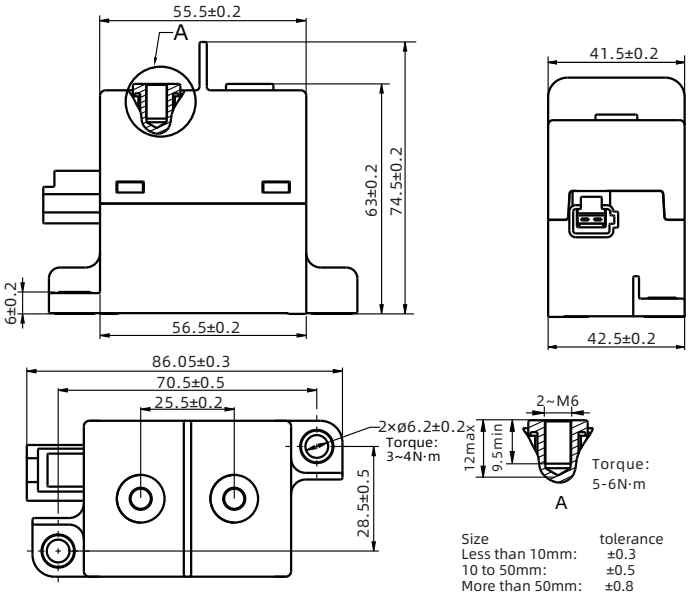

Size	tolerance
Less than 10mm:	±0.3
10 to 50mm:	±0.5
More than 50mm:	±0.8

1) Maximum torque is allowed to be installed as shown, only one-time installation is allowed, and repeated tightening of screws is not allowed.
2) Mount load connections first.


Outline Dimensions:SEL400D-HXXXMXX2JK

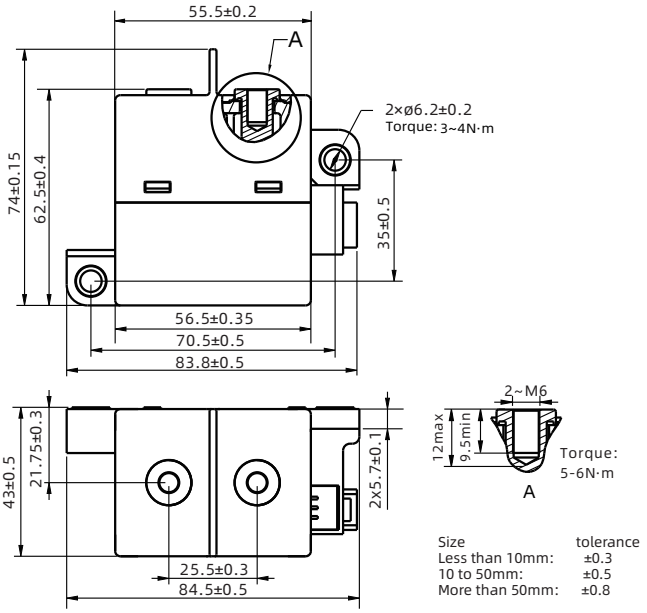

Size	tolerance
Less than 10mm:	±0.3
10 to 50mm:	±0.5
More than 50mm:	±0.8

1) Maximum torque is allowed to be installed as shown, only one-time installation is allowed, and repeated tightening of screws is not allowed.
2) Mount load connections first.

Outline Dimensions:SEL400D-VXXXMXX2JKS

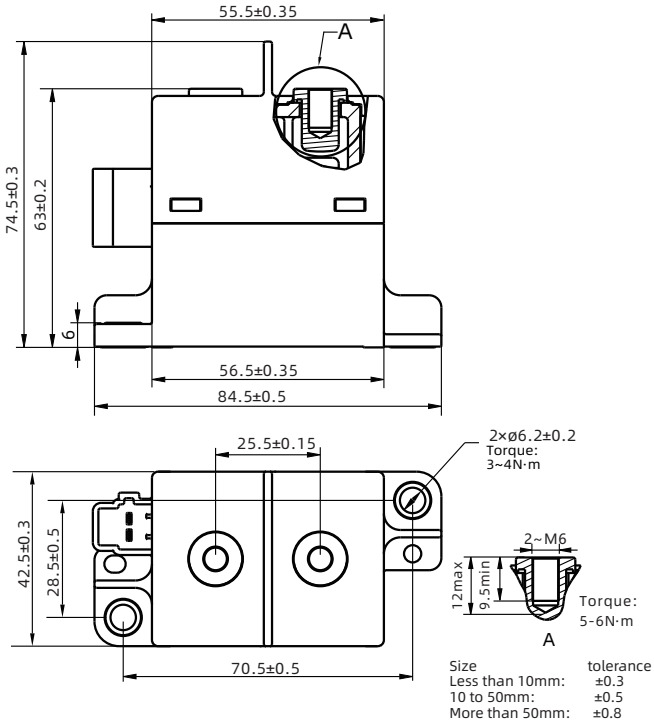


1) Permitted torque 6Nm max. One-time mounting only, no recurring screw fastening permitted.
2) Mount load connections first.


Coil Connection Type

Coil Connection Type

Connectors: 7282-1020(Yazaki)
Connectors: Yazaki: 7283-1020 or THB: 0435308 (not included in the box)

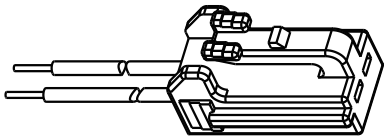


Installation Size Chart

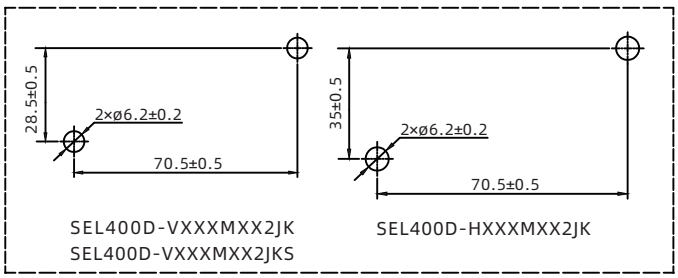

SEL400D-VXXXMXX2JK
SEL400D-VXXXMXX2JKS

SEL400D-HXXXMXX2JK

Schematic Diagram

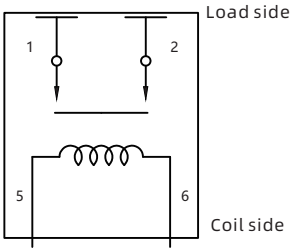

Note: No polarity on Load side and Coil side.

Product Code Structure

	SEL	400D -	V	□	M	□	2	□

Type designation
SEL

Series Code:
400D: 400A

Installation:
V: Vertical H:Horizontally

Rated Load Voltage(VDC):
500: 500VDC 800: 800VDC 1000: 1000VDC

Contact Arrangement:
M: Form A

Rated Coil Voltage(VDC):
12: 12VDC 24: 24VDC

Load connection type:
2: Internalthread

Customer special code:
Nil: No costomer special requirement
Numbers or Letters: Customer special requirement

Examples of Ordering Codes

SEL400D-V500M122JK The load voltage is 500V,Coil voltage 12V
SEL400D-V800M242JK The load voltage is 800V,Coil voltage 24V

Notes

●Mounting Precautions

1.By principle, please do not use it when the relay drops on the ground.

2.It's forbidden to use the product at the temperature beyond -40 ℃ ~ 85 ℃ for a long time as the relay contacts are sealed and filled with gas and when the contact temperature changes, the gas will break the ceramic sealed chamber .

3.When installing the relay, always use washers to prevent the screws from loosening.

4.Tighten each screw with given torque as suggested. Exceeding the maximum torque may result in screw loose, breakage, etc. When using screws, please make sure the washers are strong enough to prevent the case from deformation.

5.Avoid mounting the relay near strong magnetic fields or a heat generator .

● Precautions for connection of the load terminals

1.Please avoid excessive load applied to the product. If the product exceeds the rated range, the performance of the product cannot be guaranteed.

2.Please treat the relay as a product with limited life and replace it when necessary.

3.Be careful that foreign particles or oil attach on the terminals will lead to abnormal heating on terminals.

And below connectors or conductors with sizes are suggested.

10A	Min. 2mm^2 nominal cross-sectional area
20A	Min. 3mm^2 nominal cross-sectional area
40A	Min. 10mm^2 nominal cross-sectional area
60A	Min. 15mm^2 nominal cross-sectional area
100A	Min. 35mm^2 nominal cross-sectional area
150A	Min. 45mm^2 nominal cross-sectional area
200A	Min. 60mm^2 nominal cross-sectional area
250A	Min. 80mm^2 nominal cross-sectional area
300A	Min. 100mm^2 nominal cross-sectional area
400A	Min. 200mm^2 nominal cross-sectional area

●Precautions for connection of the coil

1.Please note that when using a diode, the release time will increase and the switching capacity may decrease. We recommend installing a surge protector varistor.

2.The pick-up voltage and drop-out voltage will change with ambient temperature, please use ratedvoltage to make sure the relay operate reliably. Don't exceed maximum coil voltage.

3.Please do not continuously apply maximum voltage on the coil.

4.Products with economizer, are recommend to use increase rapidly(phase step power supply mode)to drive the coil.

5.Products with economizer, the coil current will automatically switch after 0.1s. Please do not repeat switch the coil voltage at < 0.1s,otherwise the Product performance can be not guarantee.

Disclaimer:

This datasheet is for customer's reference only.Sanyou had tried its best toensure the information accuracy but impossible to be avoided all the incorrects.The product specification and parameter might be change due to the product improvement.All of specification are subject to change without notice, please refer to the specification and samples.

We could not evaluate all the performance and parameters for every possible application. Thus the users should be in aright position to choose the suitable product for their own application. If there is any query, please contact Sanyou for technical service. However it is the users' responsibility to determine which product should be used only.

SANYOU CORPORATION LIMITED. All rights reserved by Sanyou.