



### ◆ Feature

- ◇ 100A switching capability
- ◇ Low power consumption, pulse driven operation
- ◇ Strong resistance ability to shock and vibration, high reliability
- ◇ Dielectric strength 4kv(coil to contacts)
- ◇ Long service life
- ◇ RoHS compliant
- ◇ Dimensions: 66.7mm×46.4mm×24mm

### ◆ Contact Capacity

Type	WJ302
Rated load	100A 250VAC
Max.switching current	100A
Max.switching voltage	250VAC
Max.switching power	25,000VA

### ◆ General Specification

Contact material	Silver alloy	
Contact resistance	2mΩ Max.	
Operate time	30ms. Max.	
Release time	30ms. Max.	
Insulation resistance(initial)	1,000MΩ Min. (DC500V)	
Dielectric strength	Contact - contact: AC1,000V; 50/60Hz 1min	
	Contact - coil: AC4,000V; 50/60Hz 1min	
Creepage and dearance distance (coil contact)	8mm	
Vibration resistance	10~55Hz, 1.5mm DA	
Shock resistance	Durability	100G min
	Malfunction	10G min
Expected life	Mechanical life(1800 cycles/Hour)	100,000 次
	Electrical life(120 cycles/Hour)	3,000 次
Ambient temperature	-40℃~+85℃	
Humidity	5%~85%RH	

### ◆ Coil Data(at 20℃ )


standard type

Nominal Voltage (VDC)	Coil Resistance ±10% (Ω)			Min.Set/Reset Voltage(Max) (VDC)	Pulse Duration (ms)	Coil Power
	Single coil	Dual coil				
5	8.3	4.6	4.6	70% nominal voltage	100min	Single/Dual 3. 0W/6W
6	12	6	6			
9	27	13.5	13.5			
12	48	24	24			
24	192	96	96			
48	768	384	384			

## ◆ Ordering Information

Wj302	100A	12	D	2	XXX	
						Customer special code.
						Coil sort: 1-Single coil, 2-Dual coil.
						Coil type: D-standard type.
						Rated coil voltage(VDC): 05, 06, 09, 12, 24, 48
						Switching capacity: 100A
						Type: WJ302, Contact form: 1 Pole

## ◆ Outline Dimension(Unit: mm)

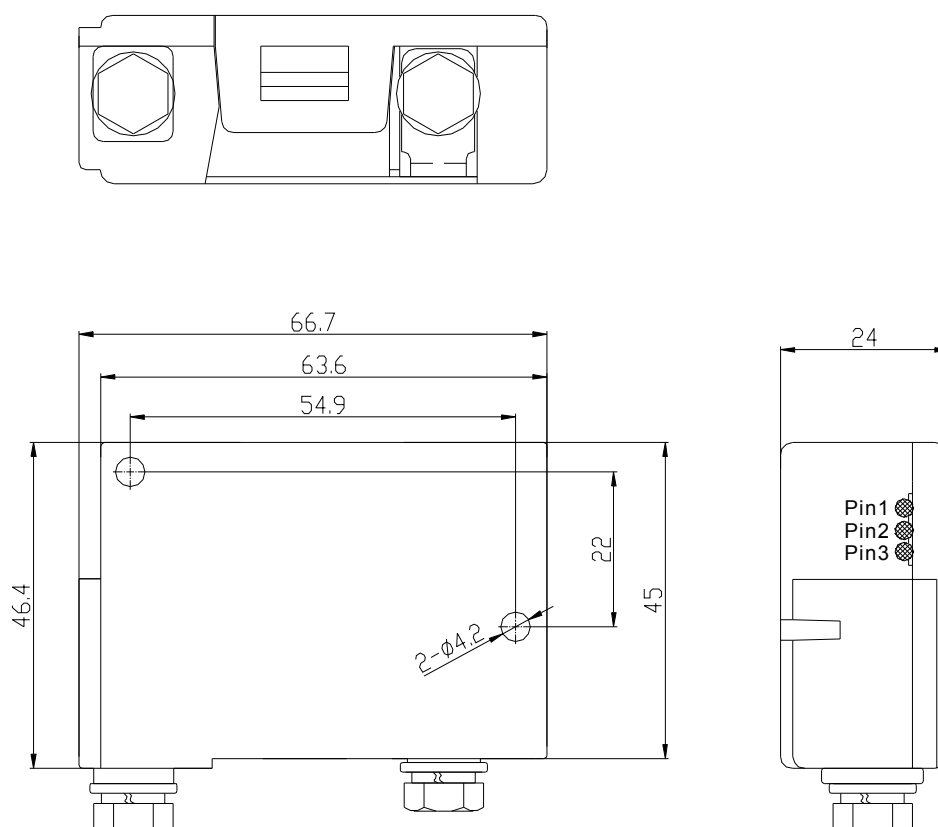

Remark: Unless otherwise specified,  
 < 1mm:  $\pm 0.2$ mm;  
 1-5mm:  $\pm 0.3$ mm;  
 > 5mm:  $\pm 0.4$ mm.

## ◆ Typical Application


◇ Energy meter used in smart grid

◇ Remote control

◇ Combination switch

◇ Electrical power

## ◆ Wiring Diagram

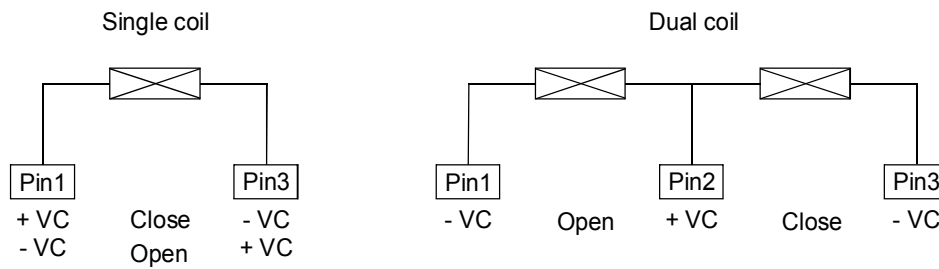

### Precautions :

1. The original position of latching relay is "closed" when shipping. It is possible that during transit or installation, the relay may change its state to be "open" position, it is recommended to set the relay in to state needed via apply voltage to the coil.
2. In order to let relay operate normally, the voltage which apply to the coil should reach to the rated voltage, the pulse width should be 50ms to 100ms; Do not energize both coil at the same time on Dual coil or energize the coil for longer than 1 minute.
3. Relay without copper wire, the terminal can not be soldered, bend, and rigid fasten both two terminals;
4. Keep away from corrosive gas and other condition which may damage the relay.